

REPOSE

R600 Massage Lounger



R600 Massage Lounger

USERS MANUAL

Deluxe Massage Chair



CONTENTS

<i>IMPORTANT SAFETY INSTRUCTIONS</i>	1-2
Applicable surroundings	1
Unsuitable users	1
Instructions on using remote control	1
Terms of using	2
Functions and features	3
<i>NAME AND FUNCTION FOR EACH PART</i>	4-11
Exterior structure	4
Interior structure	5
Function areas on main remote control	5
Instructions on buttons	6-8
VFD area instructions	9-10
Instructions on auxiliary remote control	11
<i>PREPARATIONS BEFORE USE</i>	12-13
Installation place	12
Floor protection	12
Surroundings	12
Grounding connection	12
Moving instruction	12
Assembly method	13
<i>OPERATING METHOD</i>	14
<i>AFTER USE</i>	15
<i>TROUBLE SHOOTING</i>	16
<i>CARE AND MAINTENANCE</i>	17
<i>SPECIFICATIONS</i>	18



Deluxe Massage Chair

● Important Safety Instructions

- Before use, please carefully read “important safety instructions” and use it properly.
- Please follow instructions carefully to avoid any possible personal injury or damage to the product
- For safety reasons and in order to clearly indicate potential dangers, should the product be used improperly, instructions marked in the following manners must be strictly noted.

	WARNING:	Once operating improperly, the user may be seriously hurt.
	CAUTION:	Once operating improperly, the user may be hurt or the product damaged.

● Applicable surroundings

	To avoid any electrical shock or injury, do not use it in a bathroom or damp place.
	To avoid fire, do not use product on or near any heating device or under direct sunshine.
	CAUTION:
	To avoid fire, do not use product on electro-thermal carpet or other heaters.
	Make sure to place the product on level and smooth surface at all time.

● Unsuitable users

People suffering from the following conditions should consult with their doctor before use .

	People under treatment, injuries or abnormalities.
	Serious tumour patients.
	Pregnants or menstruating women.
	Acute diseases.
	PROHIBITIONS:
	Cardiac problems.
	Osteoporosis patients.
	Use of heart pacemakers or any other internal medical electrical apparatus.

● Instructions on using remote control

	Do not operate the remote control with wet hands.
	Do not throw onto the ground or under water.
	Do not pull connecting cord.
	CAUTION :
	Do not place anything heavy on remote control.
	It is advisable to keep the remote control on its original stand.

Deluxe Massage Chair



● Important Safety Instructions

● Terms of using

	When descending the footrest or backrest, use moderate pressure and be sure there are no obstructions or children near or under the footrest.
	Before use, uncover back cushion and make sure inside cushion is in good order as with all other parts. Should any part be damaged contact distributors immediately and do not use until repaired.
	To avoid any fire or damage to the product, rated voltage must be used only.
	Keep supply cord unobstructed at all time, i.e. not twisted, knotted, over flexed or pulled and do not place anything heavy on it.
	If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid any hazard.
	Do not allow children or unconscious people to use product without any assistance.
	Do not allow children to play on the product.
	To avoid any injuries, do not use it immediately after meals.
	Make sure to load not more than two people in case any hazard or injury.
	Do not use pointed or sharp objects on or near product at any time and avoid dragging on material of product.
	Make sure there is no any dangerous objects in pockets, i.e. cell phone, knife, sharper to avoid any hurt.
	Do not use it while smoking to avoid fire.
	Do not use other medical apparatus when operating the product.
	Should any abnormalities occur when using, stop to consult with doctor.
	When disconnecting plug from power socket, be sure to hold insulating bush instead of supply cord.
	Do not move product on the fragile wood or carpet floor in case of any damage to the floor or truckle.
	Do not use it for medical purposes.
	Turn the power off after use.
	Do not use petrol, caustic agents and spray pesticide for cleaning.
	Do not sit on backrest, armrest and footrest to avoid any injury or damage.
	Allow only authorized technicians to handle any breakdown, repair or alteration to the product.
	When storing or maintenance, remove plug from power socket and make sure not to operate by wet hands to avoid any hazard.
	When storing, remove plug from power socket.
	When power cut, make sure to switch off and detach plug from power socket.



Deluxe Massage Chair

 
● Functions and Features

- 1. The ergonomically shaped backrest moving structure design does more suitsomatology and offer best massage efficiency.




- 2. Automatic body scanning technology effectively adjusts massage positions.


- 3. Delicate massage presents humanistic and overall massage enjoyment
The backrest moving mechanism between neck and waist performs kneading, tapping, shiatsu and synchronization massage modes; Meanwhile adjustment of speed and width helps to relieve muscular fatigue and improve blood circulation.

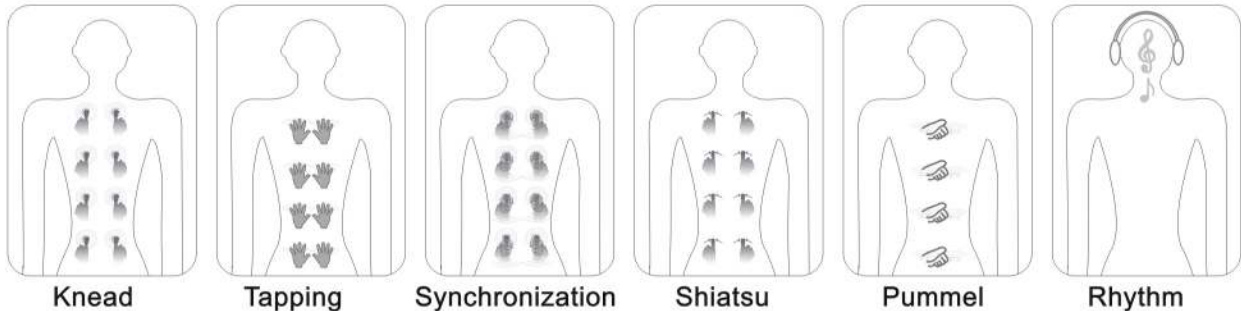

 - 4. Equipped with heating devices on waist, it effectively improves lumbar blood circulation
- 5. High power motors on perineum part offers strong vibration force.
- 6. Feet bottoms are adopted air pressure massage and heating together to keep warm and make you feel better.
- 7. Lower back adopts wavelet whole air pressure massage
Airbags at thigh, buttock and leg parts have been filling and releasing air alternatively to offer repeated air pressure massage and really helps to relax nerve and improve blood circulation for lower body.

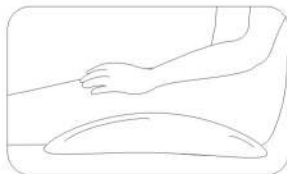

Airbags on Both Sides of Thigh

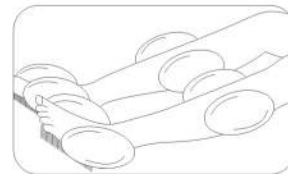 

Legs & Feet Airbags and Bottoms Heating

 
 
- 8. Music interactive feature: Music controls strength of backrest tapping and perineum vibration.
- 9. MP3 music player introduces OTG technology which is very easy and convenient to renew songs.

Deluxe Massage Chair



● Name and Function for Each Part

● Exterior Structure

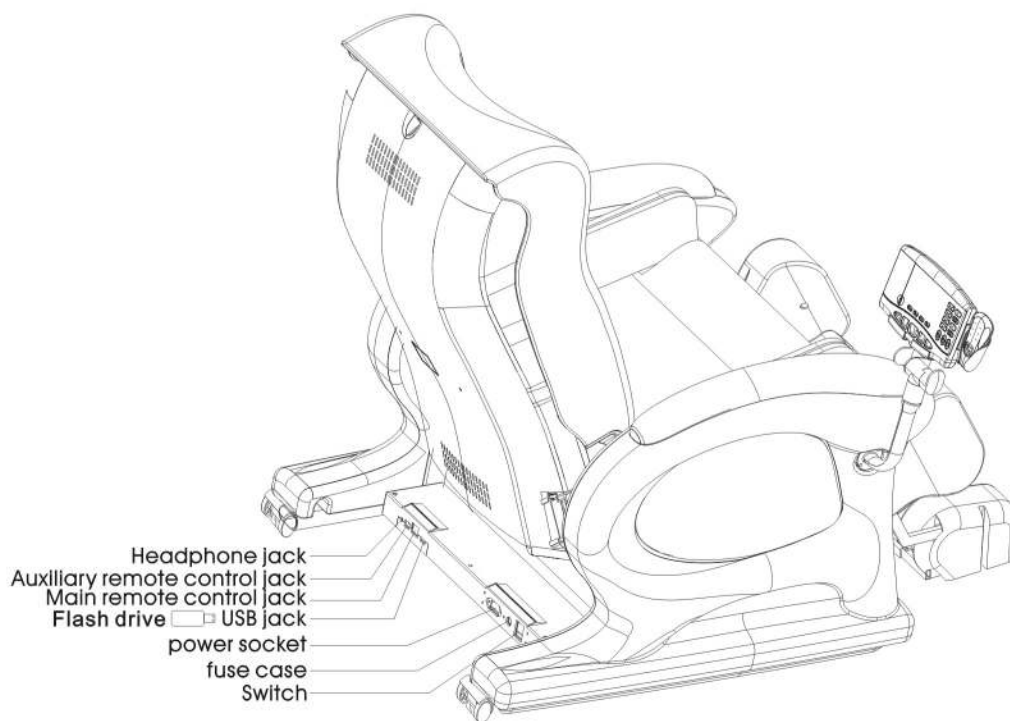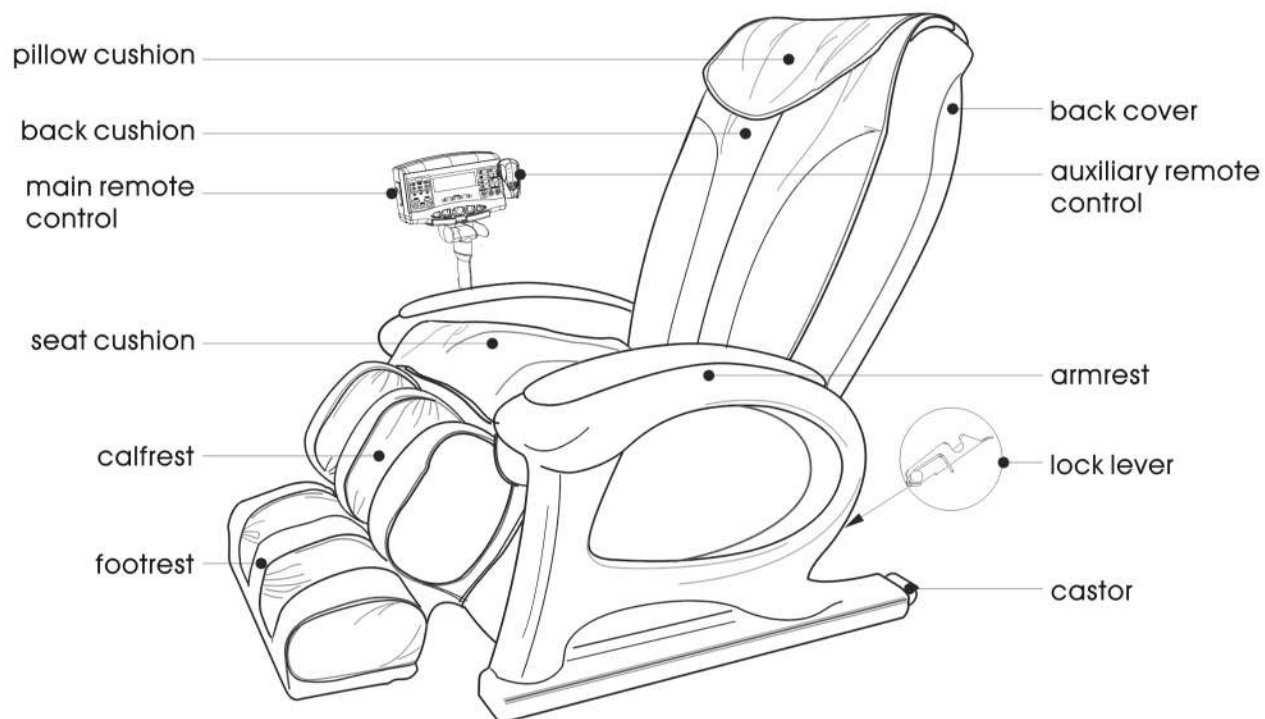





Deluxe Massage Chair

● Name and Function for Each Part

 ● Interior Structure

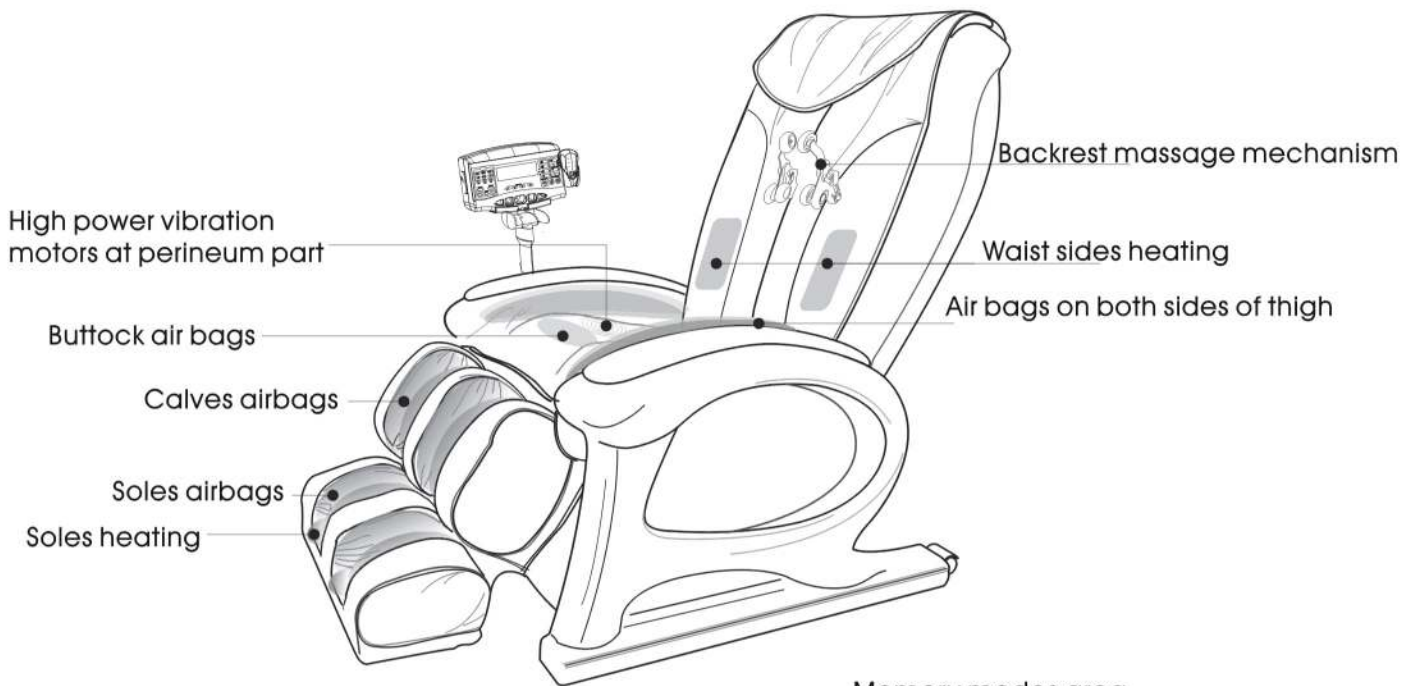

● Function areas on main remote control

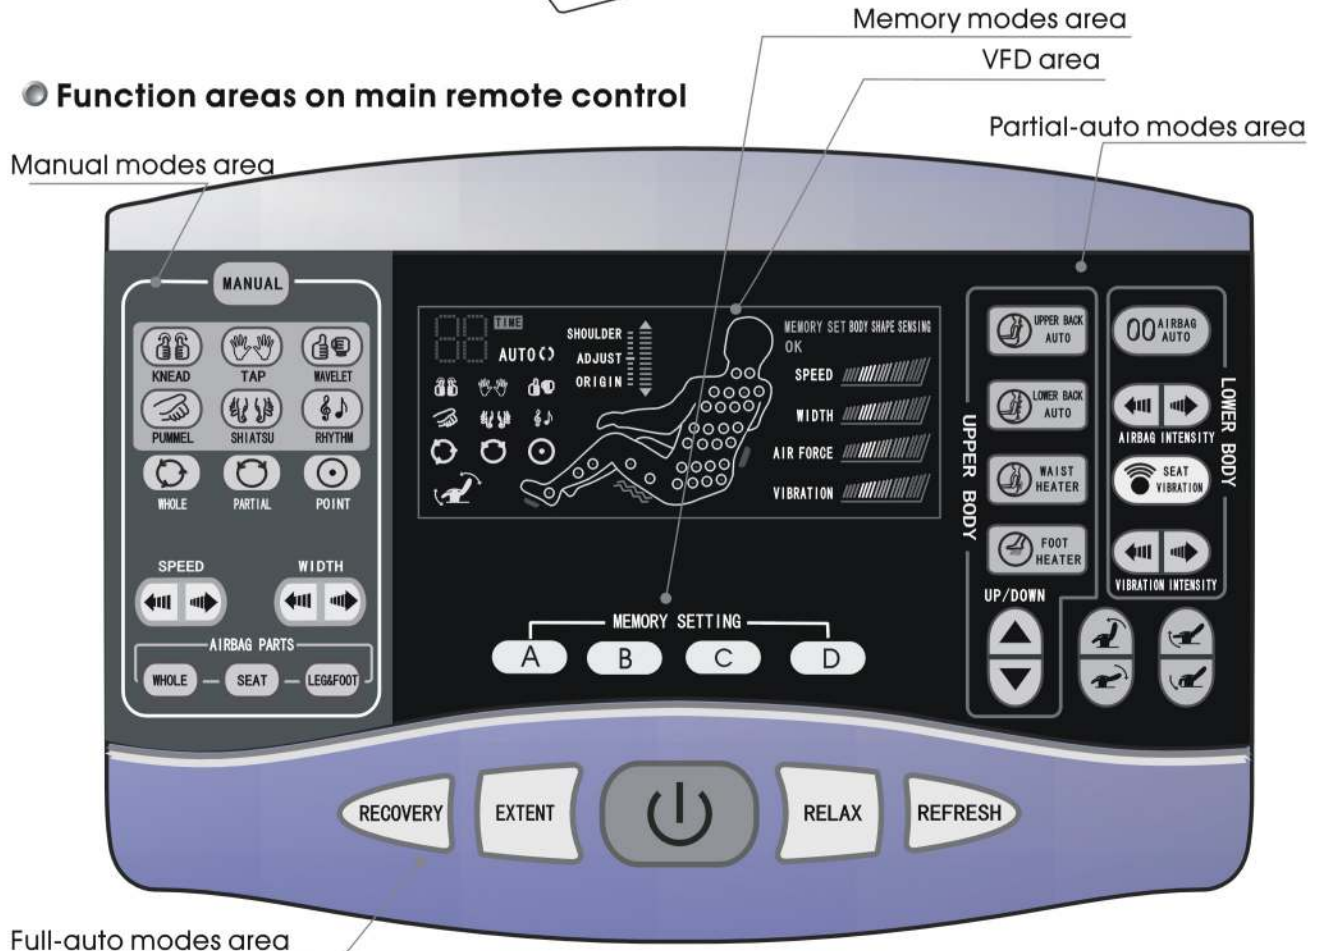 

Deluxe Massage Chair




● Name and Function for Each Part


● Instructions on Buttons

● Full-auto modes area



 
 Turn on/off massage functions.


When power on, VFD is lightened, function buttons and memory buttons are flashing for users' selection.


When power off, massage chair resets, at this moment, all buttons are invalid.  button keeps flashing to start stand-by mode. After reset, VFD will be shut off.

Full automation: There are four automations from RECOVERY, EXTENT, RELAX AND REFRESH to apply for different ages and different people.


● Partial-auto modes area

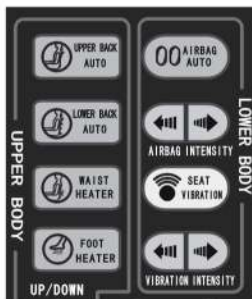


 Neck & Shoulder AUTO: Select neck and shoulder automatic programs.


 Back & Waist AUTO: Select back and waist automatic programs.

 Airbags AUTO: Turn on/off airbags automatic programs.

 Airbags strength: There are five air forces for selection. When it reaches Minimum/maximum point, a double sound occurs.

 Turn on/off seat vibration.

 Vibration intensity adjustment: There are five vibration intensities for selection. When it reaches minimum/maximum point, a double sound occurs.

 Turn on/off back heating function.

 Turn on/off soles heating functions.



Deluxe Massage Chair

● Name and Function for Each Part

● Ascend and Descend Adjustment



Backrest ascend button
Backrest descend button



Footrest ascend button
Footrest descend button




Back massage mechanism upwards button: valid only under shoulder adjustment and manual modes.
Back massage mechanism downwards button: valid only under shoulder adjustment and manual modes.

● Memory Modes Area



Four memory buttons from A,B,C and D can be selected repeatedly.

Memory setting: When working functions are finished (surplus time shows "0"), massage mechanism resets, then memory buttons are flashing automatically, select any one from A/B/C/D to store current working modes, after selection, VFD shows "memory complete" which means memory setting completed successfully .

Memory function starts: press  button, A/B/C/D four memory buttons are flashing, select any one of them, it will start the stored functions.

Note: body figure and shoulder inspection data can not be stored.

● Manual Modes Area




Deluxe Massage Chair





● Name and Function for Each Part


MANUAL Manual modes buttons. After selecting related button, the button is lightened and other buttons are activated at the meantime.


● Backrest massage modes selection


 Turn on/off kneading mode
KNEAD

 Turn on/off tapping mode
TAP


 Turn on/off kneading and tapping mode
WAVELET


 Turn on/off pummel mode
PUMMEL


 Turn on/off shiatsu mode
SHIATSU

 Turn on/off rhythm mode. Back tapping will be synchronized with high frequency message, while seat vibration with low frequency message of music rhythm.
RHYTHM

● Back massage locate

 Select overall massage position
WHOLE


 Select partial massage position
PARTIAL

 Select point massage position
POINT

● Back massage speed adjustment

SPEED
 There are five speeds for selection. Invalid for “shiatsu” massage mode. When it reaches minimum/maximum point, a double sound occurs.

● Back massage width adjustment

WIDTH
 There are three sections for selection. Invalid for “shiatsu” and “synchronization” massage modes. When it reaches minimum/maximum point, a double sound occurs.

● Airbags positions selection

WHOLE Select all air bags massage

 
SEAT Select seat air bags massage

LEGAFOOT Select leg and foot air bags massage



Deluxe Massage Chair

Name and Function for Each Part

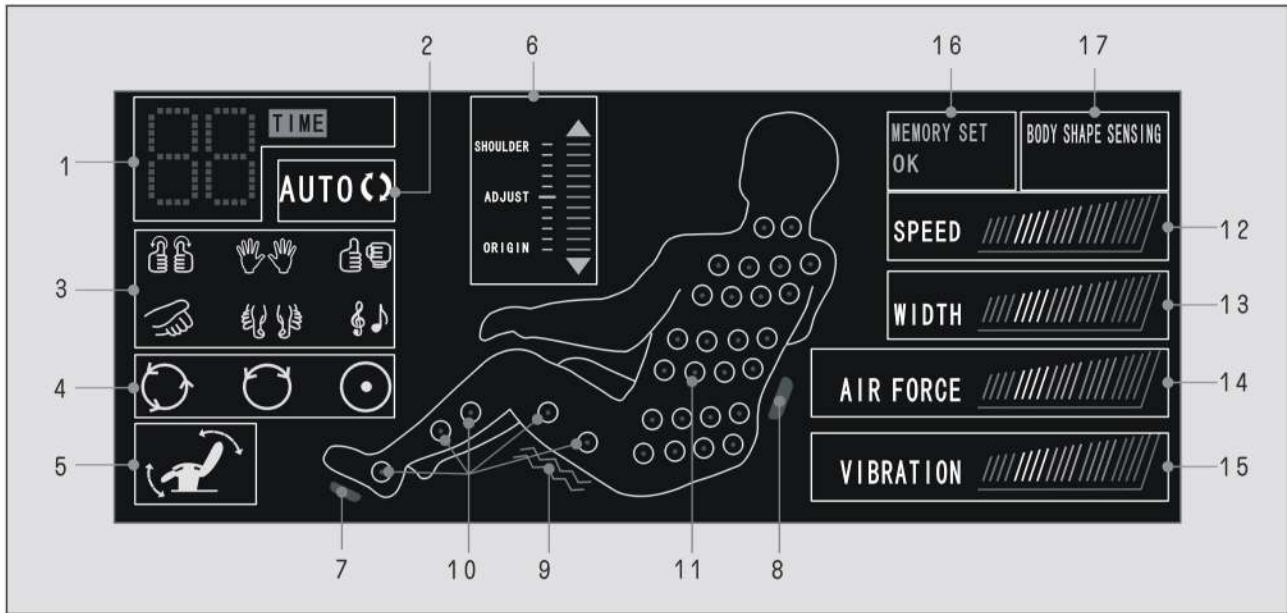

VFD area instructions

- 1. time display: During working, it shows surplus time.
- 2. backrest auto modes indications: related buttons will be lightened under six backrest auto modes from “RECOVERY”, “EXTENT”, “RELAX”, “REFRESH”, “UPPER BACK AUTO” and “LOWER BACK AUTO.” While they are invalid under any other modes.
- 3. back massage modes: shows current back massage modes.



 
4. Back massage location mode

- Overall mode: for the whole backrest
- Partial mode: on the basis of current position, massage area extends one third of overall
- Point mode: Pause at current point, desired massage points will be fulfilled by selecting “back upward and downward” button.

5. backrest and footrest ascend and descend



6. Shoulder position adjustment and back massage mechanism resets

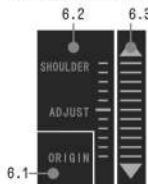

- 6.1 back massage mechanism resets indicator
- 6.2 datum mark: every interval distance keeps 2cm
- 6.3 during adjusting, massage mechanism departs to the datum mark.

Deluxe Massage Chair



● Name and Function for Each Part

- 7. soles heating indication
- 8. waist sides heating indication
- 9. seat vibration indication



- 10. lower back air bags indication
- 11. upper back massage points and mechanism resets indication
- 12. back mechanism massage speed indication: five speeds in total



- 13. back mechanism massage width indication : three widths



- 14. air force indication: five air forces



- 15. vibration intensity indication: five intensities



- 16. memory functions indication

Memory functions on:



Memory setting complete:



- 17. body figure scanning indication











Deluxe Massage Chair

● Name and Function for Each Part

● Instructions on Auxiliary Remote Control



● Mp3 music player instructions

-  Play/pause current music
-  Stop music and back to first song when replaying
-  Previous song
-  Next song
-  Turn up volume
-  Turn down volume

● *Note 1: Music rhythm controls massage modes.*

Note 2: Should any abnormality occurs on mp3 system or facilities have not been installed, a double sound will be heard when pressing the buttons.

● *Backrest and footrest ascend and descend buttons on auxiliary remote control fulfill the same functions as on the main remote control.*

Deluxe Massage Chair



 
● Preparations Before Use

● Installation place

Safety distance around massage chair.


Horizontal interval of backrest between upmost and lowest point should be more than 50cm.

Horizontal interval of footrest between upmost and lowest point should be more than 15cm

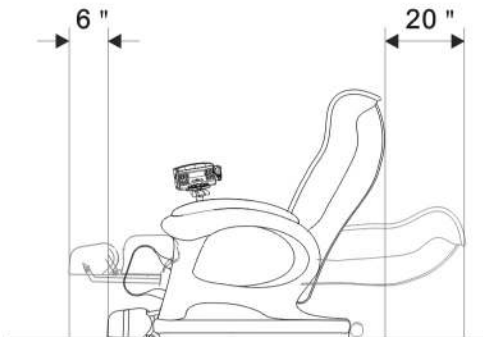

● Floor protection

 The product could damage the floor, so a medium material under the chair (carpet for instance) is strongly advised to use for floor protection.

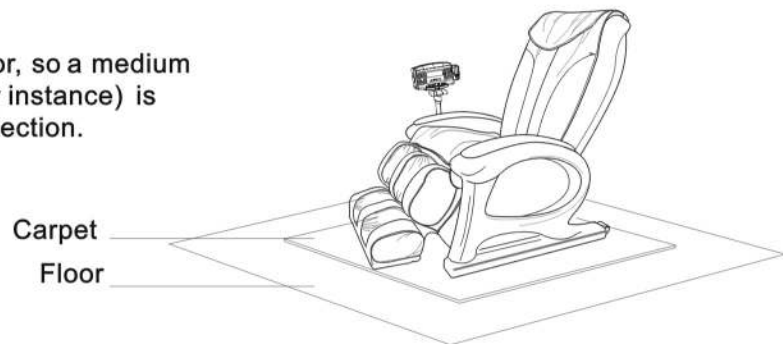

● Surroundings



Don't keep the product in a bathroom or damp place to avoid electricity leaking



Don't keep the product near stove or heating devices to avoid fire or damage to the leather cover

 
● Grounding Connection



The product belongs to class I electric appliance. Please make sure to confirm ground connection to avoid electricity leaking or any accident when using

● Moving instruction

Lift the front of the chair by using footrest and push with two hands to start moving. When moving chair do not have persons or objects on chair to avoid overturning; Do not move or drag the massage chair on a delicate floor; Do not move chair by holding on to the seat or backrest, footrest must be Used only; The chair is heavy, so handle with care.

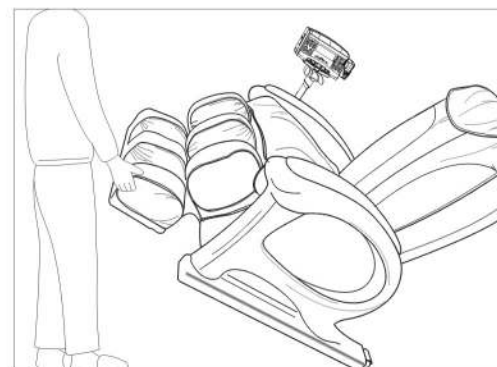



Deluxe Massage Chair

● Preparations Before Use

● Assembly method

Step 1:
Holding the points marked as figure 1 to take massage chair out of carton box by at least four people.

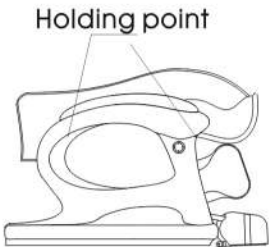 


Fig 1

Step 2:
Unfolding the backrest to 115 degree, when a reminding sound means backrest locked.

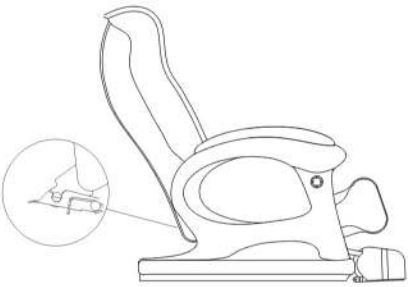 


Fig 2

Step 3:
Connect windpipes and stick seat cushion.

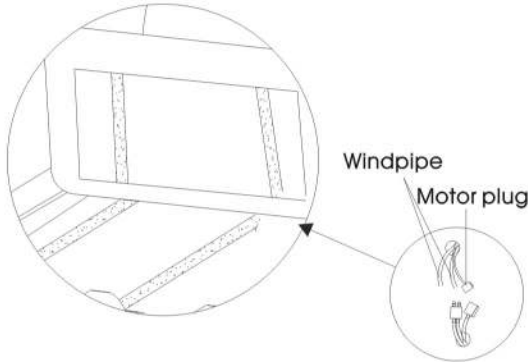 


Fig 3

Step 4
Fix the pillow cushion with backrest by using of zipper.

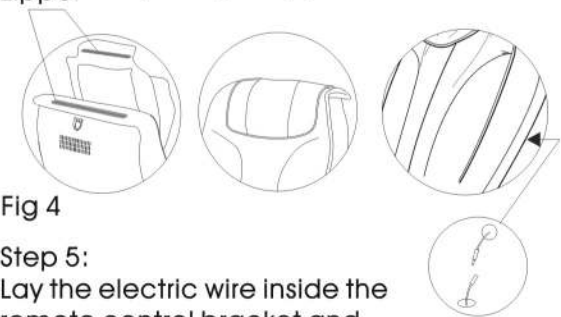 


Fig 4

Step 5:
Lay the electric wire inside the remote control bracket and fix the remote control bracket with four screws.

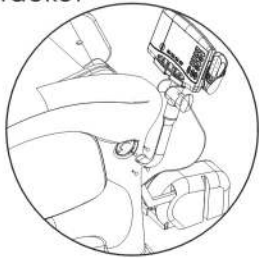 


Fig 5

Step 6:
All above steps are done, connect main remote control, auxiliary remote control and U disc into the related jacks, then connect power, switch on and start working.



Fig 6





Deluxe Massage Chair

 


● Operating Method


- Power on
- Connect plug to power socket
- Switch on (located at lower back cover)

● Backward reclining

Keep pressing “” button, backrest gradually goes down while footrest comes up with double sound reminding. When it reaches desired angle, release “” button, backrest and footrest stop moving. When backrest and footrest reach upmost and lowest position separately, a reminding sound occurs. If backrest reaches upmost, while footrest is still ascending, a continuous sound will occur, please keep pressing the button, footrest will ascend till upmost point. Meanwhile footrest can be adjusted separately by “” button and “” button. During footrest ascend/descend, backrest keeps still, when footrest reaches upmost/lowest point, a continuous sound will be heard.

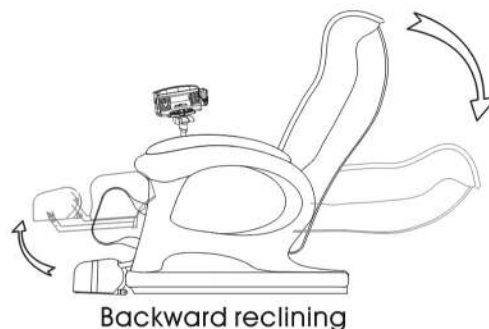


Backward reclining

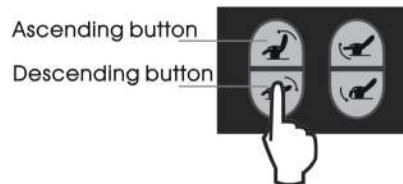 

● Forward reclining

 The operating method is the same as “backward reclining”.

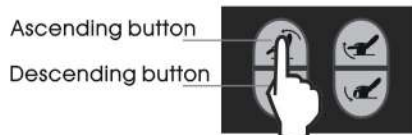

Forward reclining



Deluxe Massage Chair

● Operating Method

 
- MP3 music player
The product adopts Built - in MP3 music player, both speaker and headphone are available for music enjoyment.
- 1. connect flash drive into USB jack.
- 2.5-10 seconds later, please operate auxiliary remote control to play music.

● After use.....

- After use, turn off power and remove plug from power socket
- Keep the remote control in the bracket
- To avoid any accidents or damage, make sure to turn off power and remove plug from power socket.

- Should the product not be used for a long time, store the product.
- Storing way:

Firstly reposit footrest and backrest to the lowest and upmost position separately, turn off all massage functions and remove plug from power socket, then release lock lever as figured to lay the backrest onto the seat cushion.

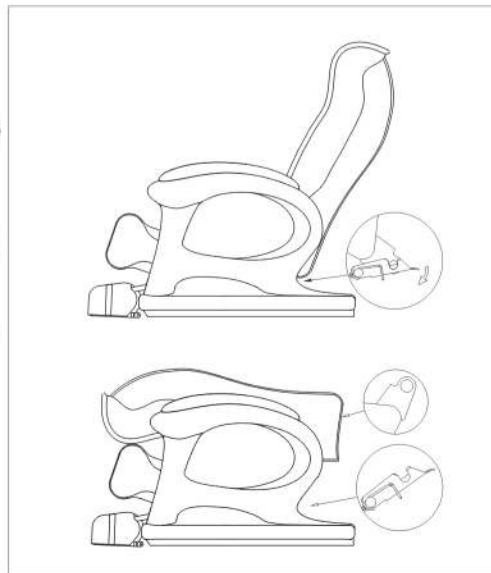



● Trouble Shooting

Symptoms	Please check below	Solutions
“xiu xiu” or “da da ” sound	It is attributed to the construction of the chair or from friction between the massage rollers and the leather cover.	Normal
Not operating	If plug has slipped out of power socket.	Connect plug
	If power has been switched off	Switch on
	If fuse broken	Replace fuse of same model
Abnormal playing of certain music	If music format matches MP3.	Replace music format
Double sound occurs when select buttons	If flash drive be connected well	Reconnect flash drive
	flash drive has been installing	Select buttons after 5-10 Seconds
	Is there any MP3 format music inside flash drive ?	Check it by computer
Soundless of headphone	If headphone is still in headphone connector	Pull out headphone and reconnect it
	If it is the lowest volume or turns off volume	Turn up volume
Over-current in motors	If it is over-burden on backrest and calf shelf	Decrease burden on backrest and calf shelf

- If above solutions haven't solved the problems, turn off power, remove plug from power socket and contact to local distributors or manufacturer for repair and maintenance.



Deluxe Massage Chair

Care and Maintenance

ADVICE Always remove plug from power socket when performing maintenance on chair . Do not remove plug from power socket with damp cloth or wet hands to avoid accidents.

Maintenance Ways

Main body

To remove dirt from plastic parts and armrests, wipe with damp cloth using mild cleaning agent and dry thoroughly with clean cloth.

NOTICE



Do not use alcohol, caustic agents or detergents etc. to avoid damage, discolouring, splitting Etc.

Remote Control

Wipe remote control with dry cloth only.

NOTICE



Never use damp materials to clean remote control to avoid accidents.

Back Cushion and Pillow

If dirty, clean with damp cloth and mild cleaning agent, followed with a clean damp cloth and leave to dry.

Storing Method

After dusting and cleaning, keep chair in a dry place. If stored for long time, cover to avoid spoilage.

NOTICE



Avoid leaving in direct sunlight, or in excessive heat as this will Cause fading and colour change.

Inspection



Please inspect

following phenomena?
Parched smell
Periodically touch insensitive
Electric wire heating
Other abnormal phenomena

STOP USING

In case of accident, please pull off the plug and contact agent or our company. Do not allowed to disassemble or fix by yourself.

Deluxe Massage Chair



● Specifications

Model: R600

110-120V~ 60Hz

200W Class I

